

We recommend you consult a contractor for installation.

READ FIRST: MAILBOX PLACEMENT REQUIREMENTS


PLEASE CONTACT YOUR LOCAL POST OFFICE BEFORE INSTALLING THE ADOORN MAILBOX TO ENSURE IT'S CORRECT PLACEMENT AND HEIGHT AT THE STREET. Per USPS, Mailboxes are required to be installed as: 1) a height of 41"-45" from the road surface to the Mailbox Door / Mail Entry Point and 2) set back 6"-8" from the front face of the curb or road edge to the Mailbox door /Mail entry point.

MOUNTING PLACEMENT

By following these measurements you should be within USPS required placement standards. Prior to installing, please ensure that these measurements fit your use case.

The middle of the post should be 16"-18" from the edge of the curb or road surface.

You must mount to a level surface.

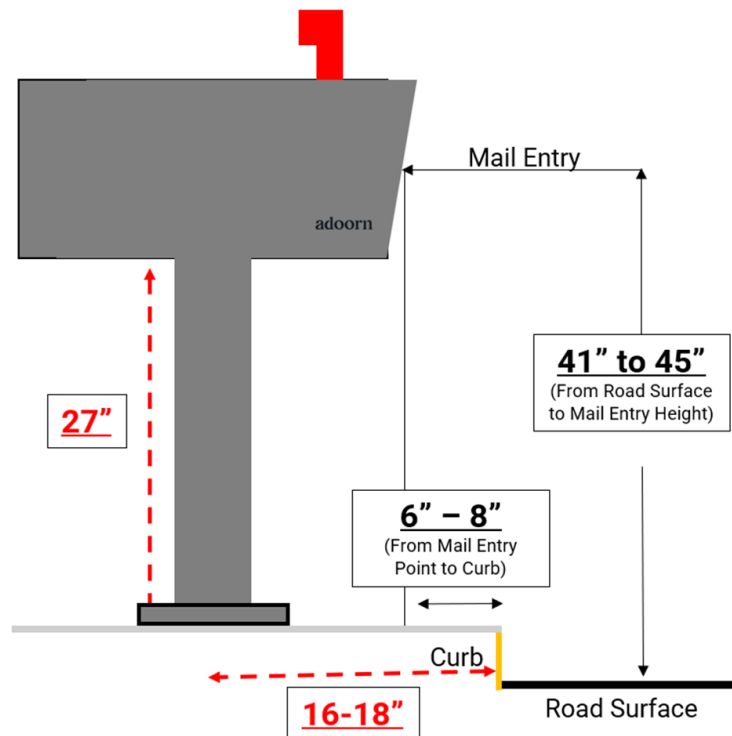

INSTALLATION INSTRUCTIONS: Installation Instructions are found on the back. We recommend you consult a contractor for installation. We have provided hardware and installation instructions for one way of installing; however your contractor may have a different installation process.

There are multiple ways to install utilizing different hardware solutions.

CARE & MAINTENANCE: Clean with soap and water. To preserve the color & finish, you can also apply a clear car wax to the exterior. If your adoorn Post finish ever becomes damaged, exposing the metal, we recommend immediately applying protective paint such as Rust-Oleum to prevent rusting.

Questions?
Let's talk.

www.adoorn.com
Email. hello@adoorn.com
Talk. 312.776.3347



@adoornhome

27” SURFACE MOUNT POST INSTALLATION INSTRUCTIONS

We recommend you consult a contractor for installation.

INCLUDED WITH POST: 4pcs wedge anchor bolts (Concrete) & 4pcs gasket washers.
TOOLS NEEDED: You will need one (1) Drill with masonry drill bit; a socket Wrench or standard wrench.


STEP #1: BEFORE STARTING, READ THE MAILBOX PLACEMENT REQUIREMENTS.

Make sure you are mounting to a level surface. Use a level to ensure the surface is level.

Measure 16”-18” from the curb or street level & mark your spot—this is your center point.

Set your 27” Surface Mount Post ensuring one side is parallel with the road surface or curb.

Mark the 4 holes with a pencil/pen.

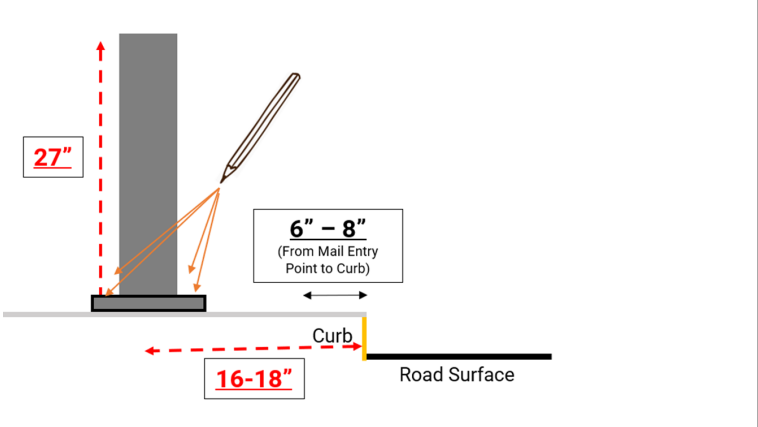


STEP 2: You will be drilling 2.5” deep holes in the concrete. To ensure the proper depth, it is advisable to measure off 2.5” from the tip of the masonry drill bit. Mark the 2.5” depth with a piece of blue painter’s tape or masking tape, ensuring that there is 2.5” visible from the tip of the drill bit to the edge of the tape.

IMPORTANT: Do NOT drill deeper than 2.5”, otherwise, the Anchor Bolts may go too deep into the hole and cannot be tightened with washers and nuts.

Drill the 4 anchor holes, keeping the drill plumb and level, ensuring straight anchor holes. Clear away any dust/debris.

Remove the washers and nuts from the wedge anchor bolts and place the M10 wedge anchor bolts into the anchor holes.


Gently hammer the anchor bolts into the drilled anchor holes, leaving the threaded part of the anchor bolts exposed. Tighten the nuts 2 or 3 complete revolutions so that the anchors expand within the holes to ensure a strong grip within the concrete.

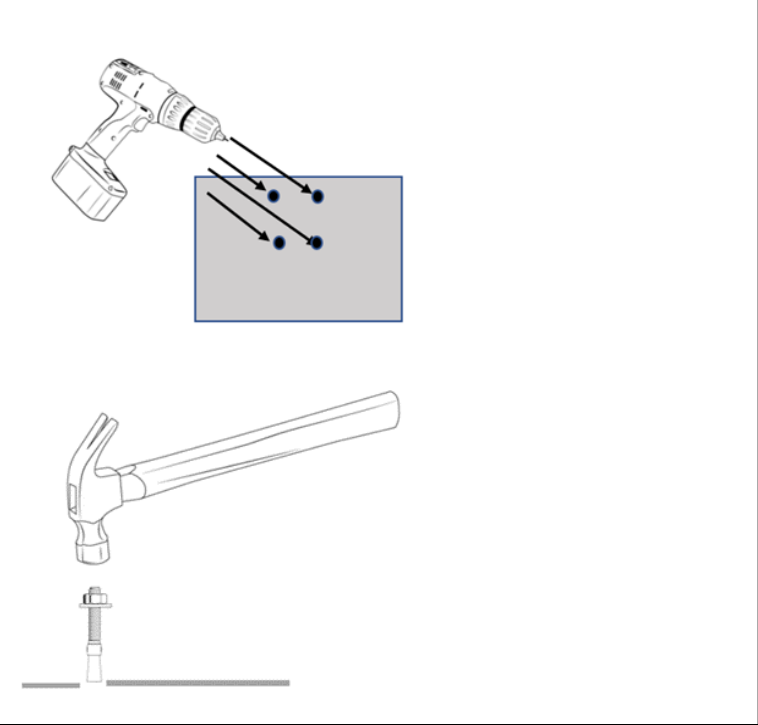

STEP 3: Align & place the Surface Mount Post over the 4 exposed anchor bolts making sure the post is flat to ground.

Attach first with washers and then tighten the nuts.

Ensure there is no movement of the post.

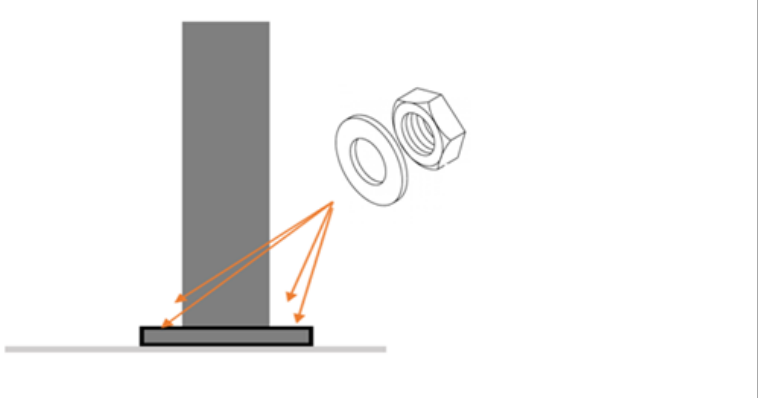

STEP 4:

Attach the mailbox by following the instructions found within the mailbox.

