

## Thank you for your adoorn purchase!

Now you can receive mail & packages any time with our secure delivery products.

Never worry about package theft, damage, or weather again. If you have any questions, please reach out to us at [hello@adoorn.com](mailto:hello@adoorn.com) or our online chat feature @ [www.adoorn.com](http://www.adoorn.com).




Register your key today!

Register Your keys using the QR CODE to the right. Once you register your keys, we will be able to provide replacement keys should you lose them in the future. Your new adoorn mailbox comes with 2 keys which allow you access to the storage compartment. These keys are NOT for your mail carrier. To retrieve your mail & deliveries, use the provided keys to open the access door.



### HARDWARE INCLUDED

- 1) 4pc Mounting Screws- 3/16" Hex Phillips head
- 2) 4pc Washers

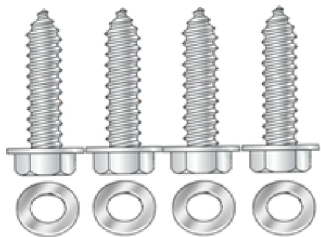

### TOOLS NEEDED (Not Included)



Drill

- 5/32" masonry drill bit
- Phillips Head attachment

Water-Resistant Caulk  
(Recommended)

**WHERE TO MOUNT:** The adoorn Wall Mount contains a water resistant design and is intended to be mounted to the side of your house, under an eave or protected area.

**CARE & MAINTENANCE:** Clean with soap and water. To preserve the color & finish, you can also apply a clear car wax to the exterior. If your adoorn finish ever becomes damaged, exposing the metal, we recommend immediately applying protective paint such as Rust-Oleum to prevent rusting. We recommend applying a lubricant, such as Tri-Flow Lubricant, to the interior of the lock twice per year.



## Consult a contractor if necessary.

Note: We recommend using a water-resistant caulk in all 4 of the screw holes after screwing into the wall to keep moisture out.

### STEP 1:

Open all doors to the wall mount mailbox. Notice 4 mounting holes. Measure 55"-65" from ground and adjust Wall Mount up & down until you find your preferred height.

Mark your desired height using a pen/pencil. Hold the Wall Mount mailbox at desired height, make sure it's level & mark the 4 holes inside the mailbox (see picture) with a pen/pencil. Remove the Wall Mount Mailbox.

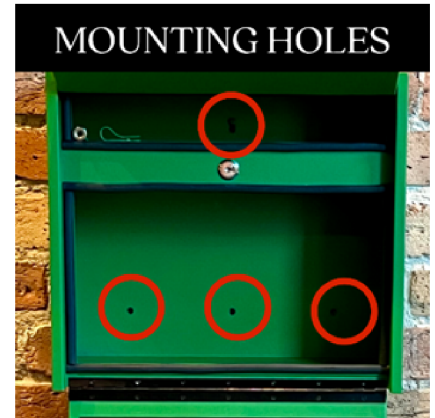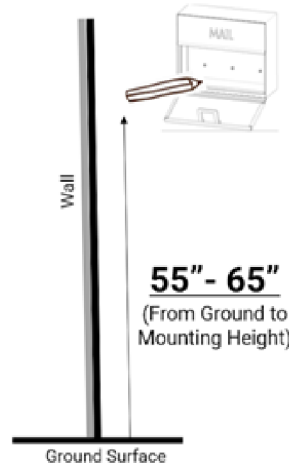


### STEP 2:

Using a 5/32" drill bit (not provided), drill four pilot holes approximately 2 inches deep into the wall material.

If installing on Stucco or masonry, use a masonry drill bit.

If installing on wood, shingled/beveled exterior or vinyl covering wood use standard drill bit.

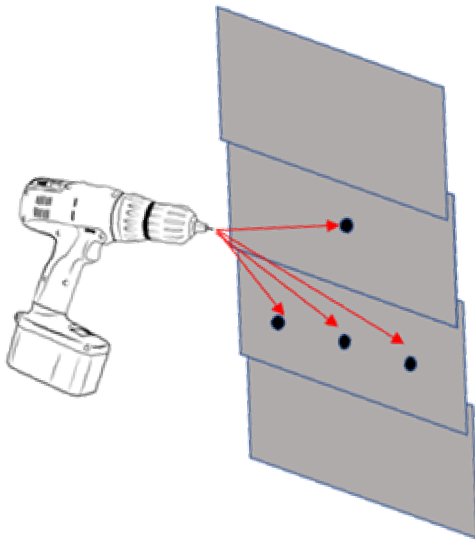

### STEP 3:

Attach the mailbox to the wall using the 4 Mounting Screws, each with a washer attached.

Place the washer over the screw. Place the screw through the center of the open Wall Mount mailbox and align with a pilot hole you've drilled. Use a drill (or screw driver) with Phillips head attachment to screw in mounting screw. Make sure Wall Mount mailbox is secure against wall.

